



# Glas-Wasserkocher 1,7 l



<b>de</b>	Gebrauchsanweisung	2
<b>en</b>	Operating Manual	8
<b>fr</b>	Mode d'emploi	14
<b>it</b>	Istruzioni per l'uso	20
<b>es</b>	Instrucciones de uso	26

<b>nl</b>	Gebruiksaanwijzing	32
<b>da</b>	Brugsanvisning	38
<b>sv</b>	Användarguide	44
<b>fi</b>	Käyttöohje	50
<b>no</b>	Bruksanvisning	56

## Important safety instructions

- These devices can be used by children older than eight years old as well as by persons with limited physical, sensory or mental capabilities, persons lacking experience and/or lacking knowledge if they are supervised or have received instructions regarding how the device is to be used safely and have understood the resulting risks. Children shall not play with the device. Cleaning and user maintenance shall not be made by children, unless they are older than 8 years old and supervised.
- Keep the device and its cord out of the reach of children under 8 years old.
- Only operate the electric kettle with the appropriate base.
- Boiling water may splash out if the device is overfilled or operated when the lid is not closed.
- Do not immerse the pot and base in water.
- If the appliance's supply cord is damaged then it must be replaced by the manufacturer's central customer service department or by a similarly qualified person. Improper repairs may constitute a serious threat for users.
- This device is intended to be used in household and similar applications, such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

The device is not intended for purely commercial use.

## Prior to use

Read the operating manual carefully. It contains important information about the use, safety and maintenance of the appliance.

It should be kept in a safe place and passed on to further users if appropriate.

The device may only be used for the intended purpose according to these operating instructions.

Observe the safety instructions during use.

### Technical Data

Rated voltage:	220 - 240 V~ 50-60 Hz
Power consumption:	2520 - 3000 W
Protection class:	I

### Safety instructions

- Only connect the device to properly installed earthed sockets. The wire and plug must be dry.
- Do not pull the connecting cable over sharp edges or clamp it. Do not let it hang down and protect it from heat and oil.
- Never disconnect the mains plug from the socket by the cord or with wet hands.
- Stop using the appliance and/or disconnect it from the mains plug immediately if:
  - The appliance or mains cable is damaged;
  - the device is not leak-proof;
  - there is any suspicion of a fault after dropping the appliance or similar.

In such cases, send the appliance to be repaired.

- Do not place the kettle on hot surfaces, such as hot plates or similar, or near open flames. It could melt.
- Do not place the device on water-sensitive surfaces. Water spray may damage them.
- Do not operate the device under delicate furniture. Escaping steam from boiling could damage the furniture.
- Never operate the kettle unattended.
- Do not switch on the device without water.
- Take the pot for filling from the base.
- Only fill with clean water, not milk, coffee, etc.
- Do not move the device during operation and do not pull on the mains cable.
- Caution: the device is hot. Risk of scalding from escaping steam. Only take hold of the hot kettle from the handle and do not open the lid when pouring.
- Always completely empty the pot. Do not let any residual water remain in the device for a long period of time.
- The mains plug is to be pulled:
  - if malfunctions occur during use,
  - before cleaning and care,
  - after use.
- No liability is accepted for any damages resulting from misuse, incorrect operation or improper repairs. Claims under warranty are likewise excluded in such cases.
- Packaging material, such as plastic film bags, do not belong in the hands of children.

### Start-up

The kettle is made from stainless steel and original Schott DURAN® glass. It is heat resistant, stable, neutral tasting and easy to clean.

Thoroughly clean the inside of the pot prior to the first use. To do so, open the lid by pressing the button on the handle.

A strainer insert in the pour spout ensures that larger limescale particles are kept back when pouring. The unnecessary length of the connecting cable can be wound at the bottom of the base part.

Connect the mains plug to an earthed socket.

Fill with the desired amount of water up to the Max line. Close the lid. Only in this way does the automatic boil stop work reliably.

Place the pot on the base in any position. Now you can press down the power switch below the handle. The control lamp in the power switch shows that the device is heating.

The power switch only engages if the pot is on the base.

Do not use the water from the first boiling process for food preparation.

### Automatic shutoff

The automatic boil stop switches off the device shortly after the water is boiled. The shutoff time is extended if the pot is only filled with a little water.

If only warm water is desired, the heating process can always be stopped by pressing the power switch.

The shutdown takes place automatically if the pot is lifted from the base.

For functional reasons, some condensation may run out of the outlet openings at the bottom of the handle to the edge of the base. This happens for technical reasons and does not impair the safety of the device.

### Safety system

A thermostat protects the kettle from overheating due to accidental operation without water by switching off the device.

It is essential to allow the pot to cool down before filling with water.

Should the first thermostat malfunction due to improper use, an additional temperature limiter ensures reliable protection.

### Cleaning and maintenance

Remove the mains plug and allow the device to cool down. Do not immerse the device in water, but rather clean them with a damp cloth with a little washing-up fluid and then dry off.

Do not use any sharp and abrasive cleaning agents.

You can remove the lid for easy cleaning. To remove the lid, press on the button on the handle and pull the lid upwards into position 2 until the lid unlocks. Then pull the lid upwards to remove it.

When you re-fit the lid make sure that you first place it in position 1 and then lock it into place in position 2.



The strainer insert in the pour spout can be removed for cleaning when the lid is open. To do so, press its upper clip upward. When inserting, place the strainer in the middle of the base and then snap it forward into place.

